

# Libec Series Pedestal P110

Libec Small Size Pedestal (Air pressure system)

## Operation Manual

### Contents

● Name of Parts	1	● Lower Column Lock Lever Operation	5
● Main Body Assembly	2	● Lock Lever and Knob Adjustment	6
● Head Attachment	3	● Caster Operation	7
● Air Pump Operation	3	● Care and Handling of the Pedestal	8
● Bleed Valve Operation	4	● Pedestal P110 (General Specification & View)	9
● Safety Lock Operation	4	● Pedestal (P110) Parts Assembly Drawing of a Column	10
● Upper Column Lock Lever Operation	5	● Pedestal (P110) Parts Assembly Drawing of a Dolly	10
● Middle Column Lock Lever Operation	5	● AfterService	11

### Special Features

- Pedestal P110 can handle a maximum weight load of 30 kg and moves up and down with ease.
- Air can be added by an air pump while a camera is mounted on the Pedestal. Easy to adjust the air pressure and weight balance.
- It is equipped with a relief valve which keeps the pressure inside the column below the uniform value.
- The Pedestal uses large size casters and can easily clear sharp drops in ground level.
- Columns and dolly can easily be assembled for using and disassembled for transporting and storing.
- Since the air pump is attached to the brace of the Pedestal, the air pressure can be added anywhere and adjusted at any particular height of the column.